

*Hydro***FLOW**®



**C RANGE**

**HYDROPATH Technology** | The home of *Hydro***FLOW**®





# Electrical Specifications

**Input Voltage** 87-240V AC (100 -230 VAC Nominal)

**Input Frequency** 47-63 Hz (50-60 Hz Nominal)

## Material Specifications

Main unit: Anodised Aluminium  
End plates: UL V-0 rated polycarbonate

## Water and Dust Protection

IP Rating: IP68 IEC 60529 (Transducer unit) IP66 IEC 60529 (Junction box)

## Built-in EMI Filter

Meets: FCC 20780 Class B  
VDE 0871 Level A

## Safety

Europe and Worldwide:  
IEC 60335-1/ EN 60335-1  
USA  
UL60335-1  
Canada:  
CSA-C22.2 No:60335-1

## Overvoltage Category II

## Environmental Specifications

Installation category:  
Cat II; Altitude: <2000 Mtrs (6562'); Operating Temperature: -20 to + 50° C (-4 to 122°F);  
Maximum relative humidity; Max 80% up to 31°C (87° F) decreasing linearly to 50% RH at 40° C (104° F)

**Overload Protection** Continuous short or open circuit on all outputs.

**Insulation** Basic insulation with the metal enclosure bonded to earth.

## Servicing

No user repairable parts are fitted. Repair must be undertaken by an authorised repair centre.

## Panel Indicators

The unit is fitted with LED indicator lights. The Green LED indicates that the power is on, and the Red indicates that a signal is being transmitted.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 years and supervised.

### ***NRTL Certification and CB Test Certificate***

In accordance with the  
International (IEC) and  
NRTL standards listed  
above.



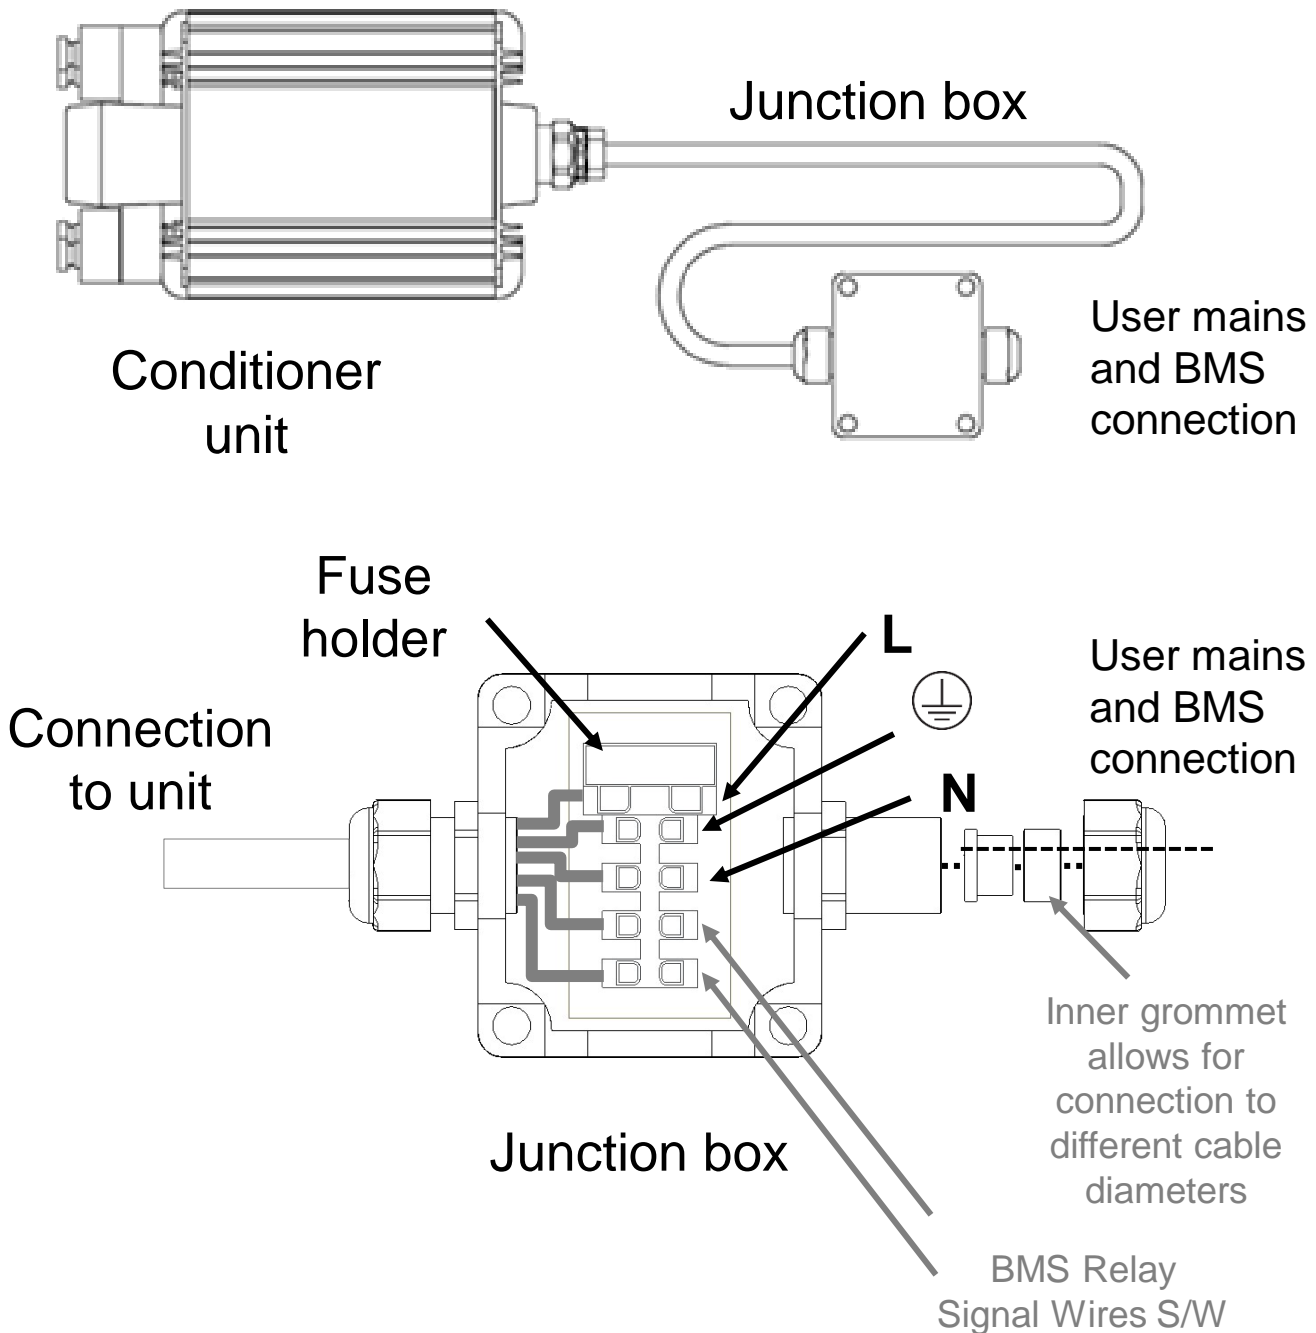
Manufactured to BSEN9002

To be installed in accordance with the  
latest IEE wiring instructions.  
*Fuse rating: 1A.*



To be installed in accordance with the  
latest IEE wiring instructions.  
*Fuse rating: 1A.*

# Electrical Specifications



## Remote Monitoring Facility

A volt-free normally-open contact closure is provided by the unit connection with a BMS (Business Management System) computer, to monitor that the unit is operating correctly. Connection to the BMS output is made via the junction box. A suitable 5 core approved cable must be used in order to make connection to the mains input and the BMS output.

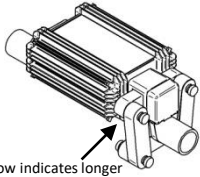
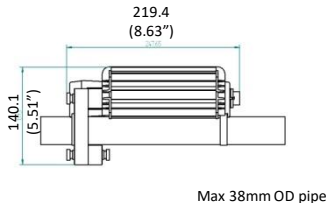
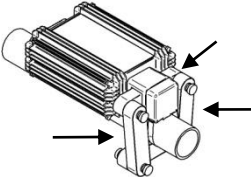
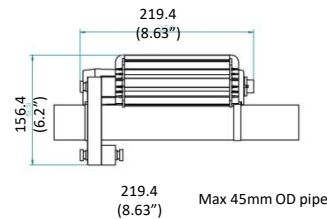
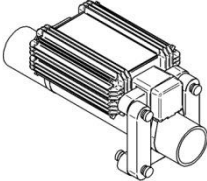
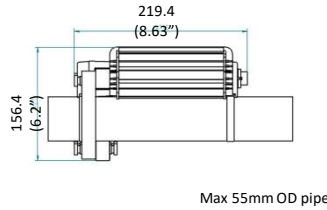
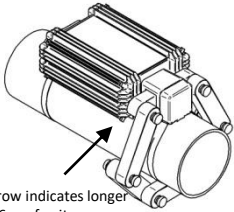
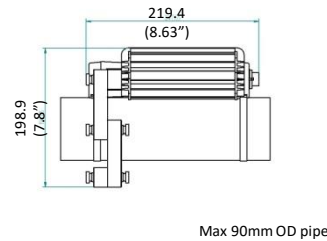
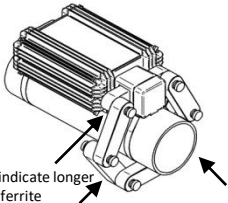
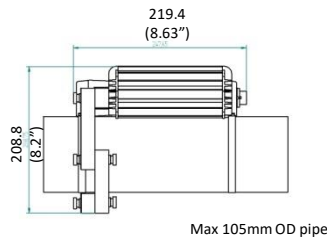
## Electrical Connection

The user must connect the electrical supply to the junction box in accordance with the on-site ruling safety legislation at the time of installation. The power supply must be isolated, for example via an isolating switch or circuit breaker. This is the sole responsibility of the user and the site safety officer must be consulted before installation is undertaken.

This equipment has no user serviceable parts. Return to supplier for servicing. If the equipment is used in a manner not specified by these instructions, the protection provided by the equipment may be impaired

# Mechanical Details









The *HydroFLOW* C Range water conditioner is specifically designed to combat limescale in commercial and/or industrial applications by clustering mineral ions. C Range units are most commonly used on heat exchangers and plumbing systems.

Model (DN)	Ferrite Arrangement	Dimensions mm (inches)	Ferrites	Total Weight kg (lbs)
C32	 <p>Arrow indicates longer 126mm ferrite</p>	 <p>219.4 (8.63") 140.1 (5.51") Max 38mm OD pipe</p>	<p>3 x 109mm (4.25") 1 x 126mm (5.0")</p>	4.0 (8.8)
C40	 <p>Arrows indicate longer 126mm ferrite</p>	 <p>219.4 (8.63") 156.4 (6.2") 219.4 (8.63") Max 45mm OD pipe</p>	<p>1 x 109mm (4.25") 3 x 126mm (5.0")</p>	4.1 (9.0)
C50		 <p>219.4 (8.63") 156.4 (6.2") Max 55mm OD pipe</p>	<p>4 x 126mm (5.0")</p>	4.2 (9.2)
C65	 <p>Arrow indicates longer 126mm ferrite</p>	 <p>219.4 (8.63") 198.9 (7.8") Max 90mm OD pipe</p>	<p>1 x 109mm (4.25") 5 x 126mm (5.0")</p>	4.4 (9.7)
C80	 <p>Arrows indicate longer 126mm ferrite</p>	 <p>219.4 (8.63") 208.8 (8.2") Max 105mm OD pipe</p>	<p>3 x 109mm (4.25") 3 x 126mm (5.0")</p>	4.6 (10.1)

- All units draw less than 1 amp of current at 120V AC
- Listed weights include: Transducer unit, power supply, ferrites, cables and mounting hardware.

# Mechanical Details

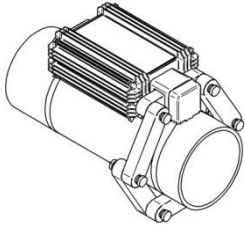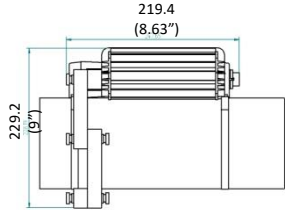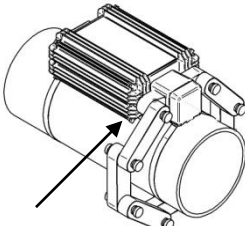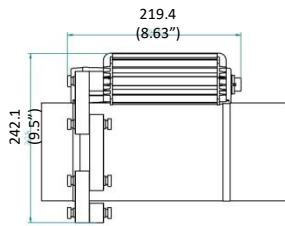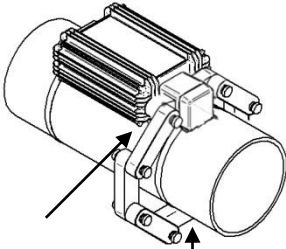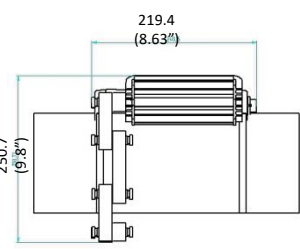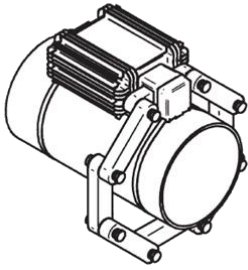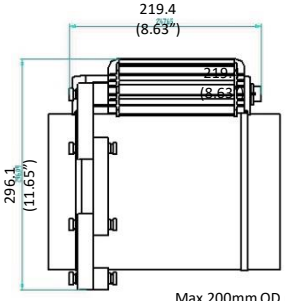The *HydroFLOW* C Range water conditioner is specifically designed to combat limescale in commercial and/or industrial applications by clustering mineral ions. C Range units are most commonly used on heat exchangers and plumbing systems.

Model (DN)	Ferrite Arrangement	Dimensions mm (inches)	Ferrites	Total Weight kg (lbs)
C100		 Max 130mm OD pipe	6 x 126mm (5.0")	4.8 (10.4)
C125	 Arrow indicates longer 126mm ferrite	 Max 140mm OD pipe	7 x 109mm (4.25") 1 x 126mm (5.0")	5.0 (11.1)
C150	 Arrows indicate longer 126mm ferrite	 Max 165mm OD pipe	6 x 109mm (4.25") 2 x 126mm (5.0")	5.1 (11.2)
C175		 Max 200mm OD pipe	8 x 126mm (5.0")	5.8 (12.8)

- All units draw less than 1 amp of current at 120V AC
- Listed weights include: Transducer unit, power supply, ferrites, cables and mounting hardware.




# Assembly

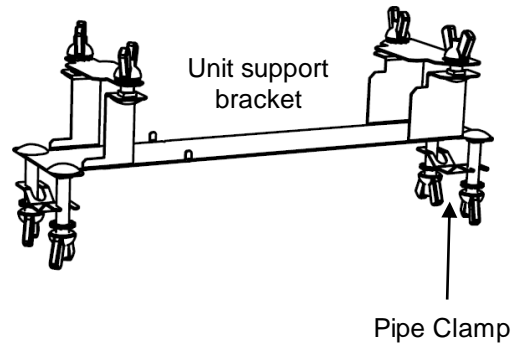
## DO NOT POWER UP UNIT UNTIL ALL FERRITES SUPPLIED ARE CONNECTED.

POWERING THE UNITS WITHOUT FERRITES WILL INVALIDATE THE WARRANTY


- The unit is supplied with a bracket for ease of mounting to the pipe. The two upper plates should be loosely secured with bolts before installation.
- Smaller units are secured to the pipe using steel clamps and bolts



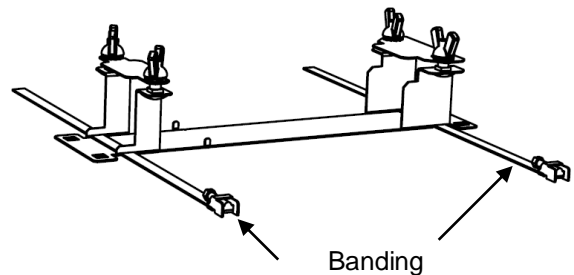- For larger units, the brackets are supplied with stainless steel banding.
- Pass the two stainless steel bands through the slots in the bracket.



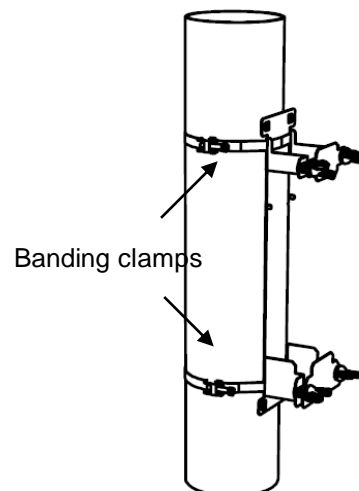- Place the bracket on the pipe.
- If installing on a vertical pipe, place the bracket with the smaller plate upwards to ease fitting of hexagon nuts.
- Tighten steel hex nuts to secure clamps for smaller units
- Secure straps on larger units by tightening clamps with flathead screwdriver or hex socket driver



### **WARNING**

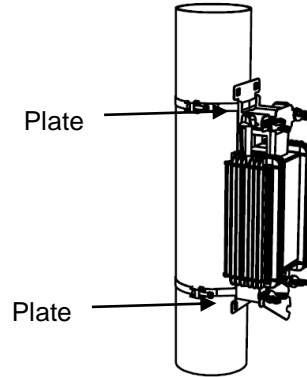
The system must be used as specified. Failure to do so will prevent correct operation of device and may impair safety.

# Assembly


## DO NOT POWER UP UNIT UNTIL ALL FERRITES SUPPLIED ARE CONNECTED.

POWERING THE UNITS WITHOUT FERRITES WILL INVALIDATE THE WARRANTY


- Place the unit on the bracket and hold in place using the swinging plates.
- Secure by tightening the four steel nuts.



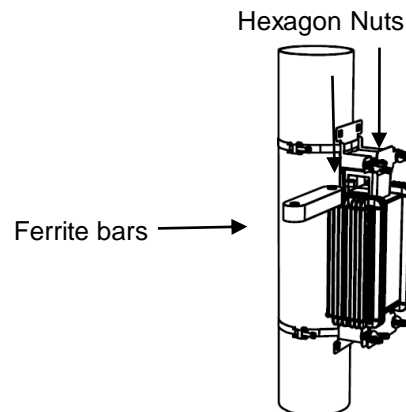- Insert the two hexagon nuts into the holes in the end plate, next to the ferrite holding cage.
- The transducer unit is supplied with at least one **long** ferrite bar. Insert this through the holding cage until the holes line up with the hexagon nuts.



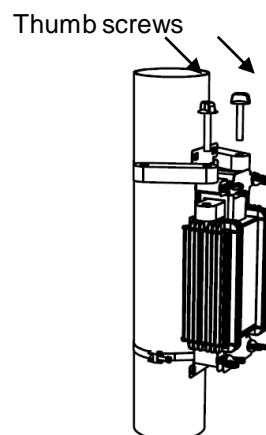- Take a second ferrite, insert a plastic thumb screw through both ferrite bars and loosely screw into hexagon nut.
- Repeat on opposite side.



### **WARNING**

The system must be used as specified. Failure to do so will prevent correct operation of device and may impair safety.

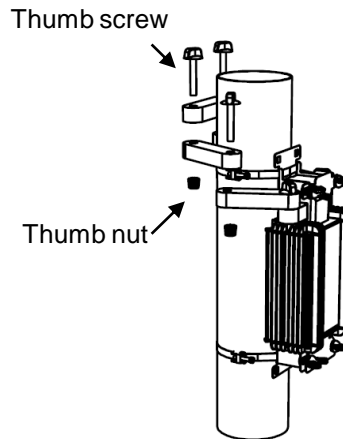


# Assembly


## DO NOT POWER UP UNIT UNTIL ALL FERRITES SUPPLIED ARE CONNECTED.

POWERING THE UNITS WITHOUT FERRITES WILL INVALIDATE THE WARRANTY


- Assemble **all** the other ferrites around the pipe according to the mechanical configuration specified for the unit.
- Loosely secure each ferrite with plastic thumb screws and thumb nuts.



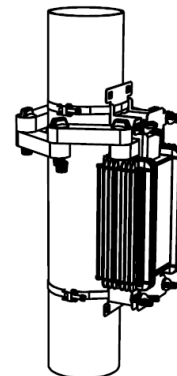- Once the ferrite ring is complete, tighten all wing nuts until hand tight.
- **Do not over tighten as ferrites are fragile.**



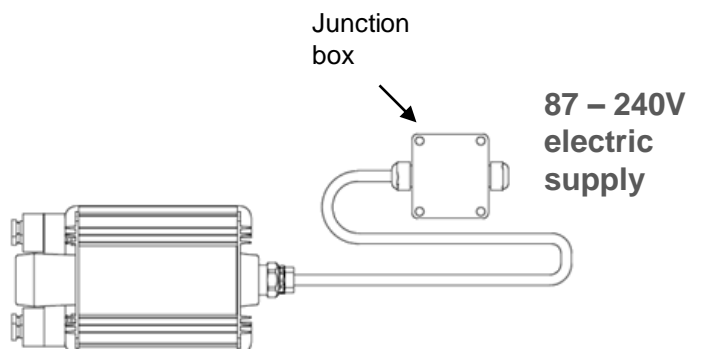- In accordance with local code and regulations, connect the junction box to the electrical power supply (87V-240V AC).
- Energise the electrical power supply and ensure that the Red and Green LED lights on the unit are glowing brightly.



### **WARNING**

The system must be used as specified. Failure to do so will prevent correct operation of device and may impair safety.

# Location Criteria

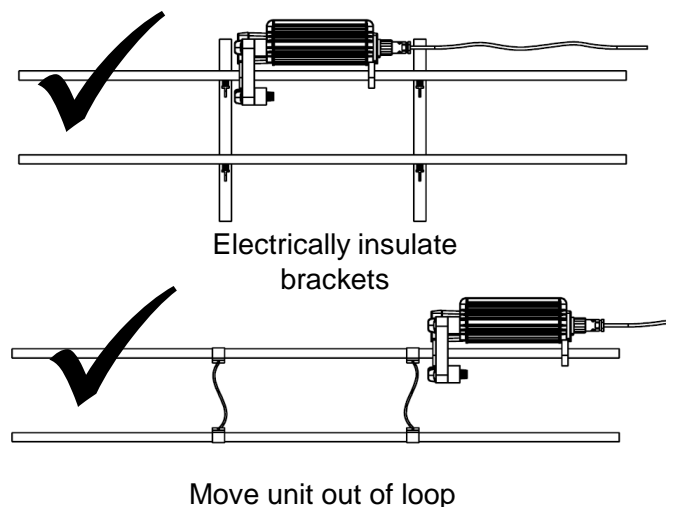
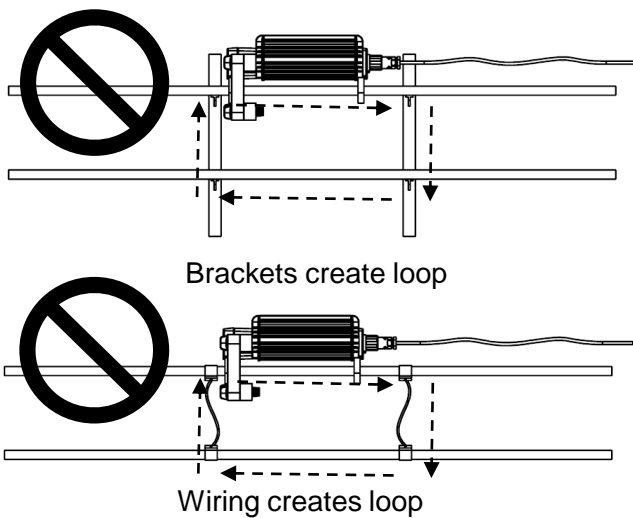
*HydroFLOW* protects against limescale by causing the scale-forming ions to form clusters. When the water is heated, crystals form in suspension rather than as hard scale on surfaces.

- Fit *HydroFLOW* on the cold water supply to wherever the water is heated.
- Consider signal propagation barriers. Such barriers include non-conducting valves, sand filters, pumps and large tanks.
- Ensure that *HydroFLOW* is protected from surfaces that may exceed 50°C. Use insulating material and select a larger model if necessary.
- Remember that *HydroFLOW* gradually removes existing scale and that after installation greater than usual quantities of scale particles may be released.

## Electrical Loops

The unit operates by creating a potential difference on the pipe on either side of the ferrite ring. An electrical loop is created whenever an electrical connection is made from one side of the ferrite loop to the other, e.g. by metal supports, wiring or pipework. A loop will prevent the unit from operating correctly.

This problem can be solved by moving the unit outside the electrical loop. If this is not possible, the metal support brackets can be electrically insulated. Installing the unit on a section of plastic pipe eliminates the possibility of an electrical loop.



If you are unsure of any details of fitting or installation, please contact your local Hydropath representative for technical support.









## Box Contents

Transducer Unit

Instructions

Model	Long ferrites	Short Ferrites	Plastic Hex Nuts	Plastic Thumb Screws	Plastic Thumb Nuts	Steel Bracket	Steel Bands	Pipe clamps	50mm bolts	Addl. washers and wing nuts
<b>C32</b>	<b>1</b>	<b>3</b>	<b>2</b>	<b>4</b>	<b>2</b>	<b>1</b>	<b>0</b>	<b>2</b>	<b>4</b>	<b>4</b>
<b>C40</b>	<b>3</b>	<b>1</b>	<b>2</b>	<b>4</b>	<b>2</b>	<b>1</b>	<b>0</b>	<b>2</b>	<b>4</b>	<b>4</b>
<b>C50</b>	<b>4</b>	<b>0</b>	<b>2</b>	<b>4</b>	<b>2</b>	<b>1</b>	<b>2</b>	<b>0</b>	<b>0</b>	<b>0</b>
<b>C65</b>	<b>1</b>	<b>5</b>	<b>2</b>	<b>6</b>	<b>4</b>	<b>1</b>	<b>2</b>	<b>0</b>	<b>0</b>	<b>0</b>
<b>C80</b>	<b>3</b>	<b>3</b>	<b>2</b>	<b>6</b>	<b>4</b>	<b>1</b>	<b>2</b>	<b>0</b>	<b>0</b>	<b>0</b>
<b>C100</b>	<b>6</b>	<b>0</b>	<b>2</b>	<b>6</b>	<b>4</b>	<b>1</b>	<b>2</b>	<b>0</b>	<b>0</b>	<b>0</b>
<b>C125</b>	<b>1</b>	<b>7</b>	<b>2</b>	<b>8</b>	<b>6</b>	<b>1</b>	<b>2</b>	<b>0</b>	<b>0</b>	<b>0</b>
<b>C150</b>	<b>2</b>	<b>6</b>	<b>2</b>	<b>8</b>	<b>6</b>	<b>1</b>	<b>2</b>	<b>0</b>	<b>0</b>	<b>0</b>
<b>C175</b>	<b>8</b>	<b>0</b>	<b>2</b>	<b>8</b>	<b>6</b>	<b>1</b>	<b>2</b>	<b>0</b>	<b>0</b>	<b>0</b>

# HYDROPATH

The home of *HydroFLOW*®

To register the product please visit  
[hydropath.com/product-registration/](http://hydropath.com/product-registration/)  
 Products must be registered to activate any  
 warrantee or guarantee. All goods are sold subject  
 to our standard terms and conditions of sales,  
 copies of which are available upon request.

